Operating and Safety Guide

Compiled by:	B Sankey

Document ID	OSG .HDAS.1
Approved by	DC
Version	0.3
Date	13/07/21

DESCRIPTION	Door/Window Jamb Anchor System	ITEM CODE (S)	HDAS.1
POWER SUPPLY	N/A		
SERVICE INTERVAL	Ins06ss		

It is the responsibility of the user to ensure they are familiar with this user guide, and are trained in the correct care and use of this equipment. User must also be aware of the operating characteristics, application limits, and the consequences of improper use of this equipment. If you require technical assistance or product training please call: 0800 000 346. A Full Manufacturers Instruction manual is available on request.

The Door Jamb Anchor is an anchorage connector for a personal fall arrest system, designed to be temporarily installed in a door or window opening.

Step 1. Adjust the Door Jamb Anchor to fit inside the desired opening by removing the detent pin and sliding the adjustable leg toward the D-ring. Make sure the fine adjustment pad is adjusted so that it is tight against the support bar. See Figure 6.

Step 2. Place the Door Jamb Anchor in the door or window opening with the D-ring facing the area where work will be performed. The adjustable leg may be located either on the left or right side of the opening. The Door Jamb Anchor must rest on the bottom of the window or door opening. Do not attempt to install the Door Jamb Anchor in a position where it is not supported by the floor or window sill.

WARNING: *This Door Jamb Anchor must be installed at the bottom of the window or door opening, resting on the sill. If the anchor is not resting on the sill it may rotate when loaded, allowing the anchor to come free of the window or door opening. Failure to follow this warning may result in serious injury or death.*
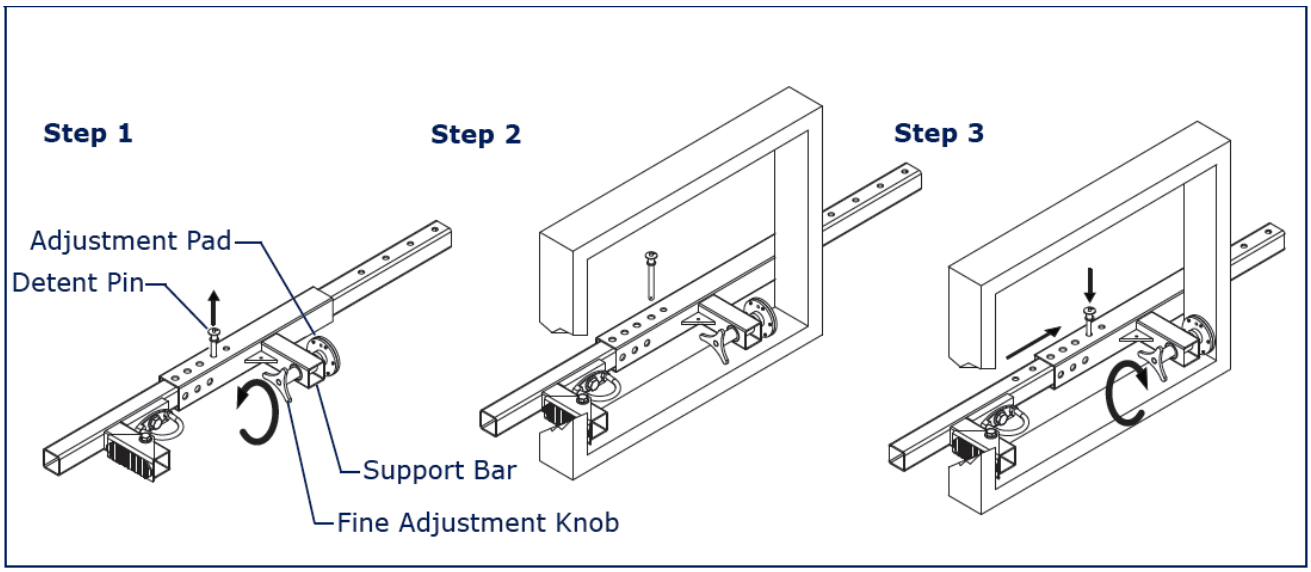
Step 3. Slide the adjustable leg as close to the door or window jamb as possible and insert the detent pin in a corresponding set of adjustment holes. Secure the anchor using the fine adjustment knob by rotating the knob clockwise.